


Healthy Work Practices

Selected Examples

- Lead Safe Work Practices
- Spray Foam Worker Protections
- Bath Fan Installation
- Dryer Vent Installation
- Air Sealing with Pest Exclusion

Lead Safe Work Practices



- Set up work area
- Contain dust avoiding unsafe tools, use poly sheeting, cover belongings etc
- Don't spread lead dust outside work area

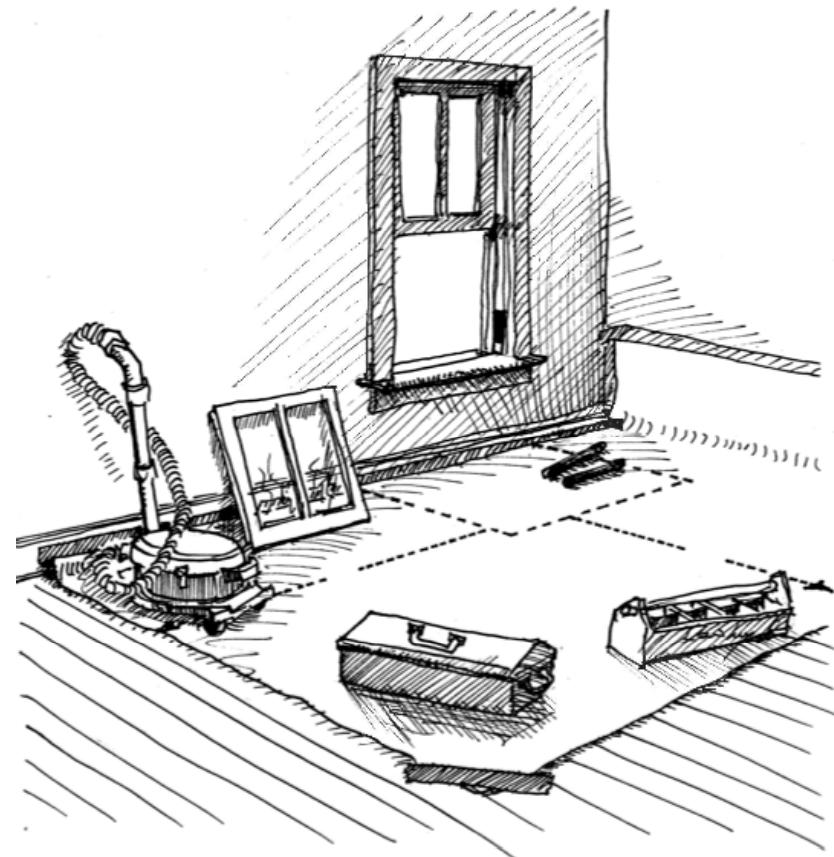

Clean Up – HEPA Vacuum



Clean Up

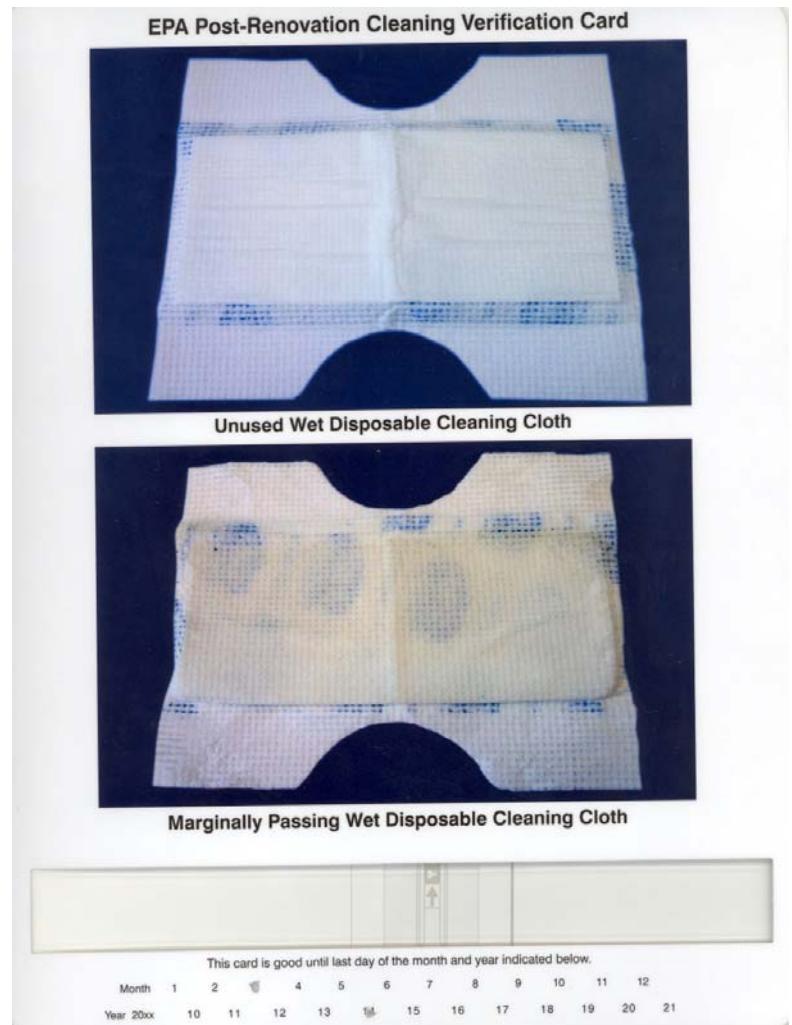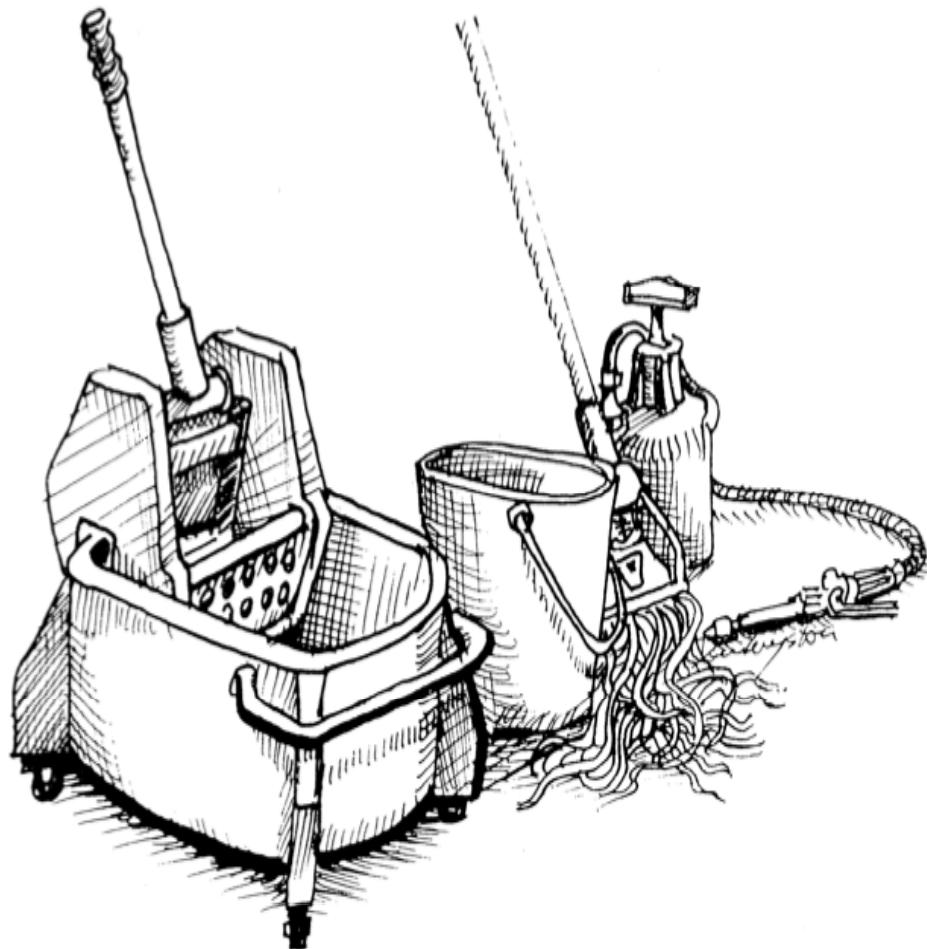

This card is good until last day of the month and year indicated below.

Month	1	2	3	4	5	6	7	8	9	10	11	12
Year 20xx	10	11	12	13	14	15	16	17	18	19	20	21

Spray Foam Worker Protections




Source: Advanced Energy

Spray Foam Worker Protections




Air Sealing with Pest Exclusion

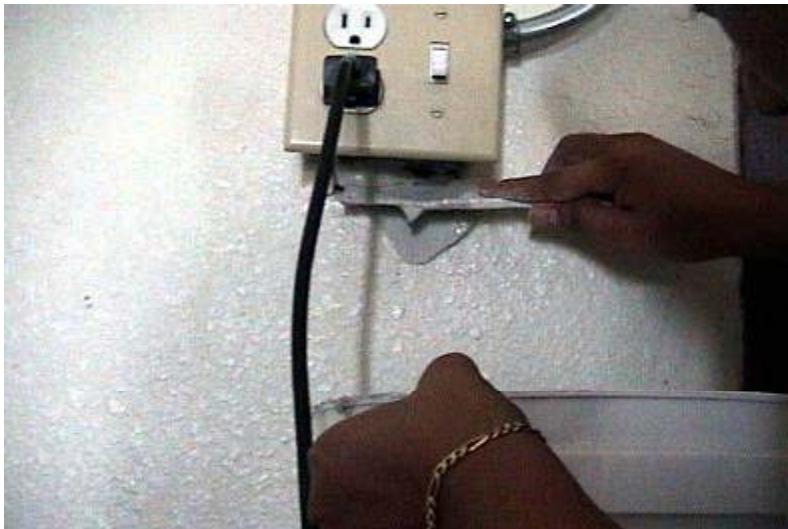


Dryer Exhausts Correct vs. Incorrect

U.S. DEPARTMENT OF
ENERGY

DRYER VENTS

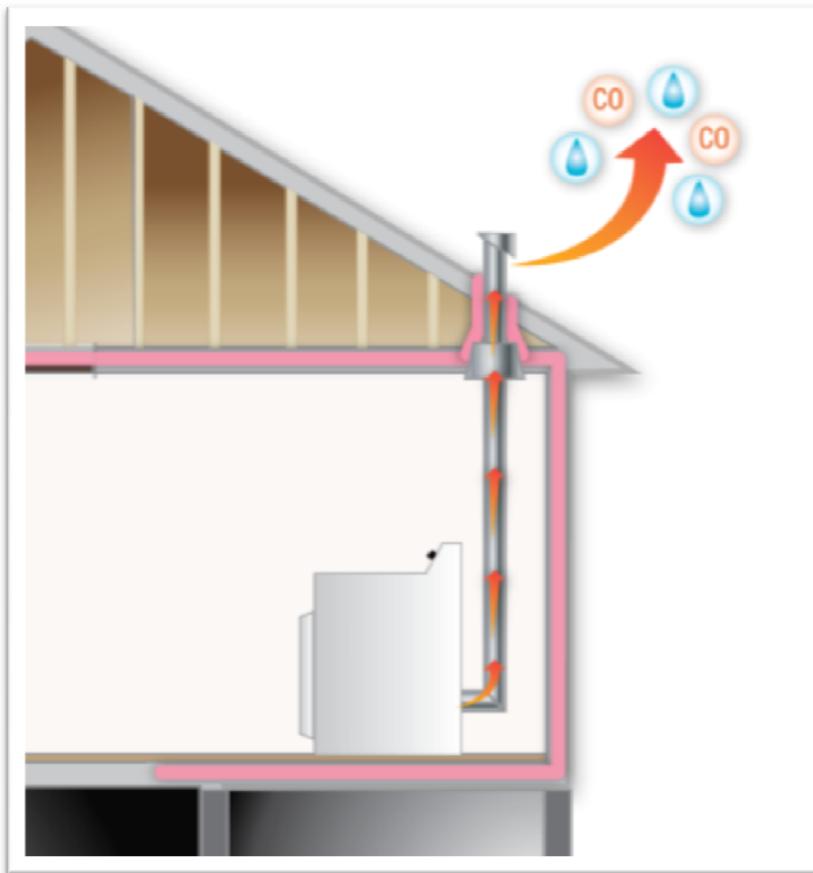

Correct

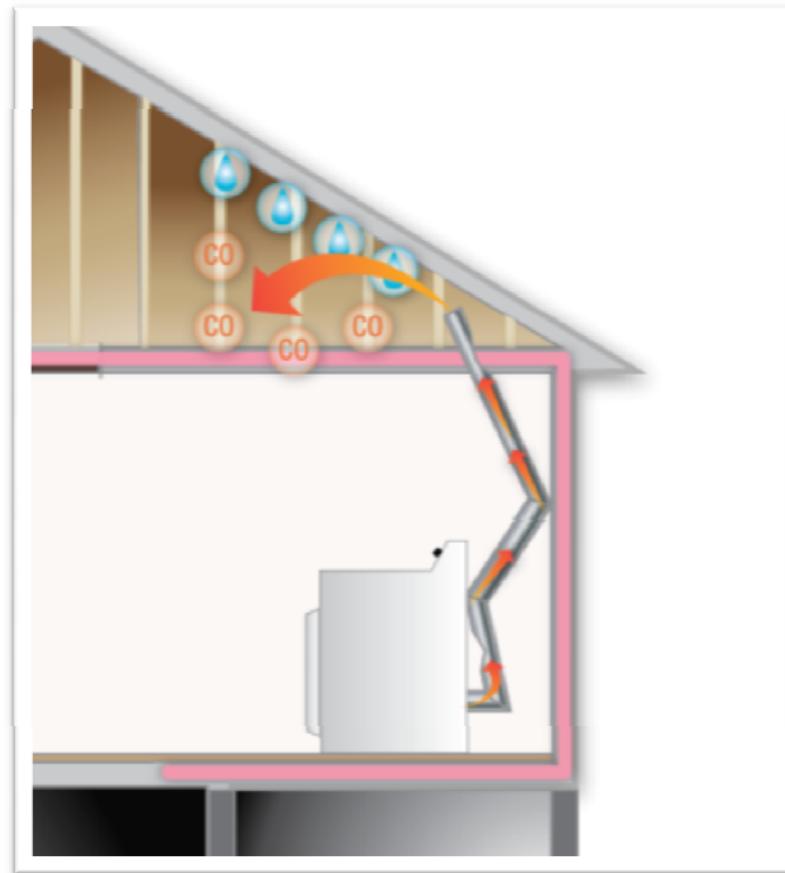

Incorrect

Summary

DRYER VENTS

Smooth Materials

Straight, short runs
directly outside

Smooth, tight connections

Insulated in
unconditioned spaces

Exhaust vents prevent
leaks and pests

