




CRITICAL DETAIL:

WINDOW WEATHERSTRIP INSTALLATION

ENERGY + HEALTH PROGRAM

1. Clean the bottom of the sash, the sides of the window jamb and the back side of the sash at the top.
2. Cut strips of v-seal weatherstripping to be slightly longer than the height of the bottom sash.
3. Raise the sash all of the way and stick the v-seal to side jambs. Tack in place at the top and bottom with a small finishing nail.
4. Cut the v-seal to fit on the back side of the top of the sash.

✓ CLEAN WINDOW

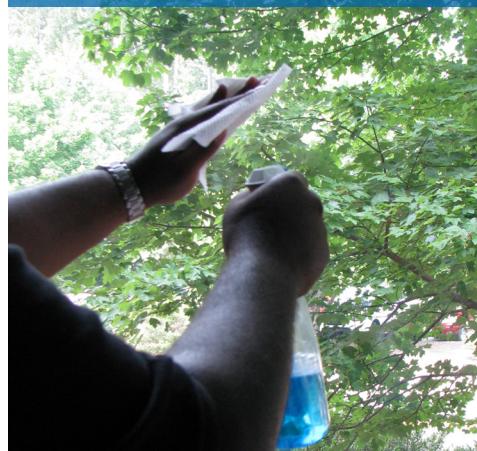

✓ MEASURE + CUT



✓ ATTACH SEAL



✓ MEASURE + CUT



5. Stick the v-seal to the back side of the top of the sash with the open side facing up.

6. Attach a foam strip to the bottom of the sash.

7. Temporarily seal the top sash using a removable sealant product such as Zip-A-Seal or removable rope caulk.

✓ ATTACH SEAL



✓ ATTACH FOAM



✓ SEAL TOP SASH

