


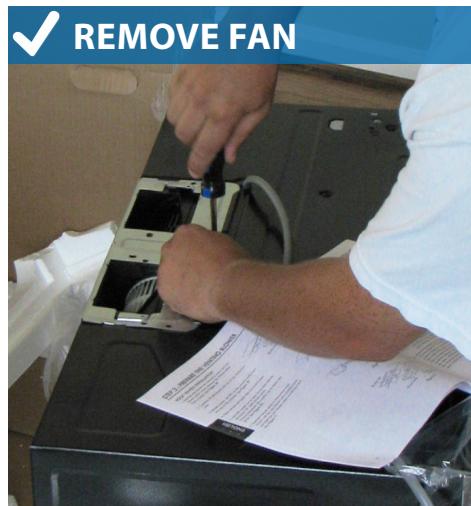


CRITICAL DETAIL: KITCHEN EXHAUST FAN INSTALLATION

ENERGY + HEALTH PROGRAM

1. Before installing the hood, remove the fan, filter light and the knock-out for the exhaust duct.
2. Position the hood against the bottom of the cabinet and mark the outline for the duct hole.



3. Drill holes at each corner of the rectangular outline and cut out the hole.
4. Mark the same rectangle at the top of the cabinet to be in line with the lower hole. Cut out the hole to allow the duct to pass into the attic.

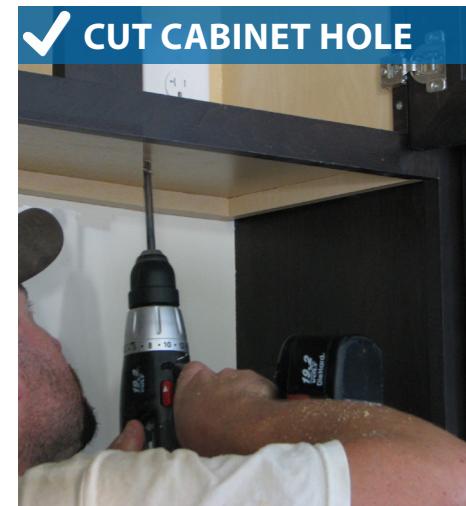

5. If electricity is not wired to the location, have a licensed electrician install proper wiring.
6. Ensure the electrical cable is fed into the back of the unit, and mount the unit to the underside of the cabinet.



7. Follow the metal duct installation critical detail and seal gap between the duct and drywall.
8. Make the electrical connections in the junction box, install fan and light components and test the kitchen fan to verify it works properly.

