





CRITICAL DETAIL:

EXHAUST FAN WALL TERMINATION INSTALLATION

ENERGY + HEALTH PROGRAM

1. Find the approximate location of the termination in the attic or crawlspace and note structural member locations.
2. Locate the duct termination on the exterior and position it in the center of a course of siding.

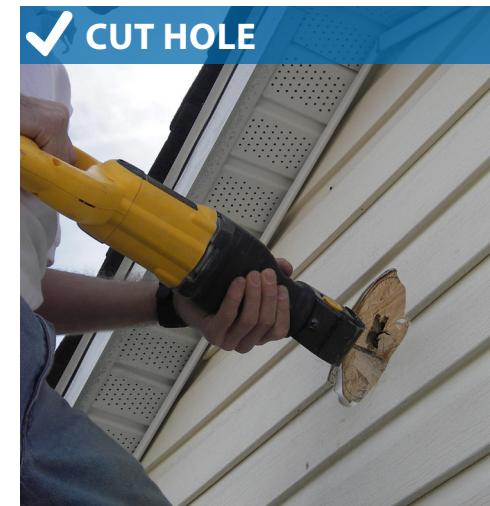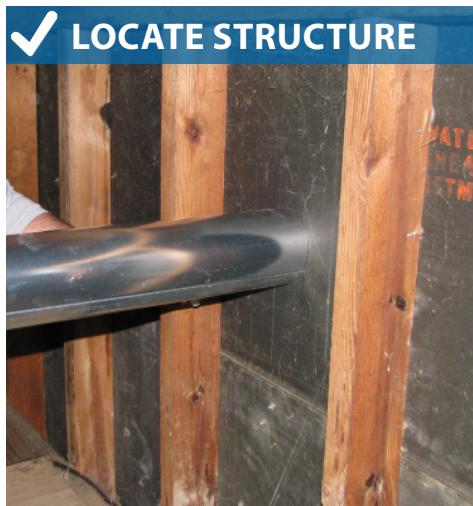

3. Outside of the house, trace the outline of the duct, avoiding structural members.
4. If installing the termination through the attic, cut a hole the diameter of the duct.
5. If installing the termination through the crawlspace, use hammer drill to cut hole. Use a masonry bit and chisel for a clean hole.
6. Screw the steel flange vent cap into place and verify the cap moves freely. Caulk the underside of the steel flange vent cap.

