




INFORMATION SHEET:


ENERGY + HEALTH PROGRAM

BATHROOM EXHAUST FAN TROUBLESHOOTING


1. Cut the duct to the exact length to eliminate the possibility of unnecessary curves, crimping, restrictions or length.

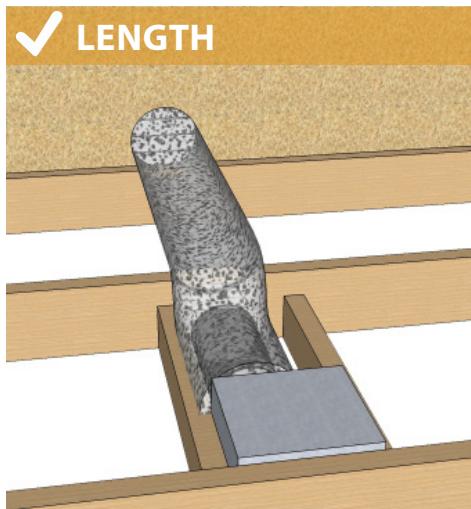


2. Ensure the inner liner is not tucked inside of the insulation or restricting movement of the fan damper.

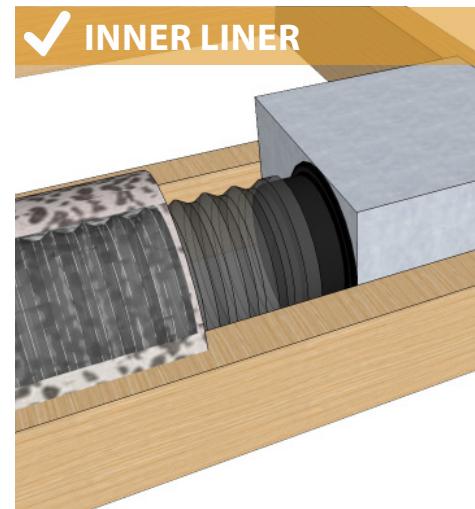

3. After checking the inner liner reaches both the fan collar and the exhaust termination, seal it in place using bucket mastic and zip ties.

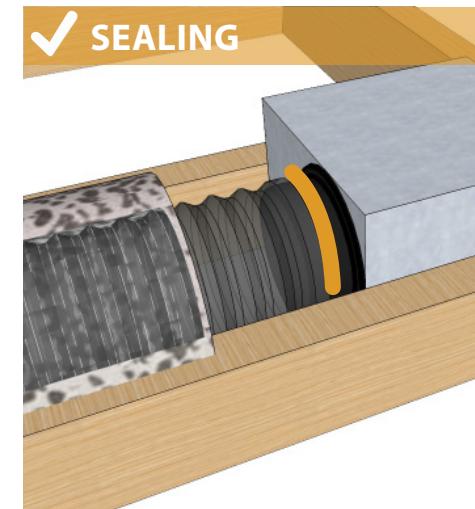

1. The termination should have little to no restriction, with the exception of a metal insect screen. Remove any packing tape during install.

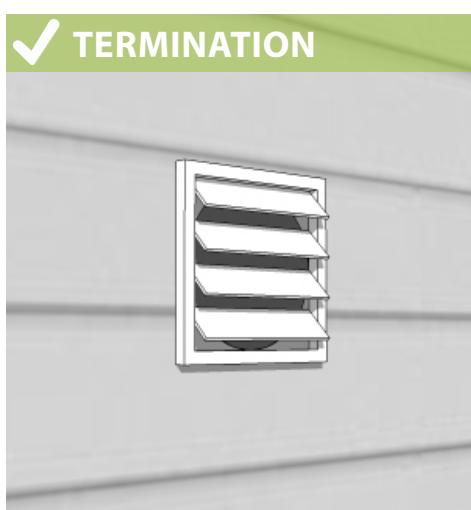

2. Verify the duct terminates outside of the building, especially if the termination is located at the soffit.

